

WARNING VIBRATORY TRENCH ROLLER

Any piece of equipment can be dangerous if not operated properly. **YOU** are responsible for the safe operation of this equipment. The operator must carefully read and follow any warnings, safety signs and instructions provided with or located on the equipment. Do not remove, defeat, deface or render inoperable any of the safety devices or warnings on this equipment. If any safety devices or warnings have been removed, defeated, defaced or rendered inoperable, **DO NOT USE THIS EQUIPMENT!!!**

REQUIRES NUMBER 2 DIESEL FUEL ONLY!!

WARNING! This product contains or produces one or more chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

Danger: This roller has and creates multiple pinch points. Keep hands, feet and other body parts clear at all times.

NEVER TOUCH A LEAKING HYDRAULIC HOSE IT CAN PIERCE YOUR SKIN! Escaping hydraulic oil under pressure can have sufficient force to penetrate your skin, causing serious personal injury. If injured by escaping fluid, obtain medical treatment immediately!

CAUTION: Avoid parking roller on a hill or incline. If roller must be parked on a hill, block drums in addition to setting the brake to prevent the roller from moving.

IMPORTANT SAFETY RULES TO FOLLOW

1. Never operate this machine on side slopes greater than 14 degrees or 25% grade.
2. Check that all safety devices and guards are in place before starting machine. Do not operate the machine if any safety devices or guards are missing or inoperative.
3. Always wear protective shoes or shoe guards when operating this equipment. Wear snug fitting clothing hardhat and ear protection. Wear safety glasses and leather gloves.
4. Check that all controls are functioning properly immediately after start-up.
5. Remain aware of changing positions and movement of other equipment and personnel on the jobsite.
6. Remain in visual contact with the machine at all times when operating controls.
7. Remain aware of changing surface conditions. The machine could shift or slide unexpectedly.
8. Position yourself safely when operating machine in reverse or on hills.
9. Do not refuel when engine is hot or running.
10. Do not leave the machine running unattended.
11. Do not operate the machine indoors.
12. Vibration operates only with the machine in the low speed travel mode.

REFUELING & MAINTENANCE

Warning: The Customer is responsible for all damages resulting from lack of fuel or lubrication. Check the motor oil, coolant and hydraulic oil every time you refuel the equipment.

REFUELING

Stop the engine and shut off electrical equipment while filling the fuel tank. Use extra caution when fueling a hot engine. Always ground the fuel nozzle against the filler neck to avoid sparks. NEVER SMOKE while handling fuels.

COOLING SYSTEM

Keep the radiator free of debris. If at any time the motor overheats, shut it off and call us immediately.

Danger: *Never remove the radiator cap on a hot engine the liquid is under pressure, extremely hot and will cause serious burns.* Liquid cooling systems build up pressure as the engine gets hot. Before removing the radiator cap, stop the engine and let the system cool. Remove the radiator cap only after the system is cold.

For cooling systems with an overflow tank, the coolant can usually be checked at the tank without removal of the radiator cap.

If the person receiving this handout will not be the user of the equipment, forward these instructions to the operator. If there is any doubt as to the operation or safety of the equipment,

DO NOT USE!!! CALL A TOOL SHED IMMEDIATELY!!!
FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN INJURY OR DEATH