

WARNING 43' ELECTRIC BOOM LIFT "MEWP"

Any piece of equipment can be dangerous if not operated properly. **YOU** are responsible for the safe operation of this equipment. The operator must carefully read and follow any warnings, safety signs and instructions provided with or located on the equipment. Do not remove, defeat, deface or render inoperable any of the safety devices or warnings on this equipment. If any safety devices or warnings have been removed, defeated, defaced, or rendered inoperable, **DO NOT USE THIS EQUIPMENT!!! This Page Contains Basic Guidelines & Safety Warnings For This Lift. But It Is Not A Substitute For The Operators Manual. READ THE OPERATORS MANUAL!**

This is a BATTERY powered machine, and it needs to be plugged into a 120v grounded outlet at the end of each day. Failure to charge batteries will result in loss of usage. The renter is responsible for maintaining battery charge when on their job site.

OPERATING INSTRUCTIONS

The *Operator's Manual* is located in the black plastic box in the front of the operator's platform. **Before you operate this lift, read, understand, and obey all the safety rules and operating instructions in the Operator's Manual Always perform a pre-operation inspection and function test prior to use for every shift as outlined in the Operators Manual!**

TIP OVER HAZARD, this lift is for use on level compacted surfaces only! Warning: Misuse, operating when not level and overloading the platform will cause this Lift to Rollover. The Equipment Protection Plan does not cover damage from Rollover or to Tires. Renter is responsible for tow and recovery services should the Lift become stuck or rolled over. A Tool Shed does not provide any tow or recovery services.

WARNING: Only Qualified persons shall operate the equipment and shall do so in accordance with the full provisions outlined in the operator's manual provided. Only lessee's Qualified operators are authorized to operate the equipment. Do not lend, or sub-lease this equipment.

OSHA LAW REQUIRES A FULL BODY HARNESS WITH LANYARD ATTACHED TO A LANYARD ANCHORAGE POINT BE WORN AT ALL TIMES BY EVERY PERSON IN THE PLATFORM! Never Move The Lanyard From One Anchorage Point To Another Unless The Platform Is On The Ground And The Power Is Off!

\$100.00 PER HOUR TO REMOVE PAINT, PLASTER, ETC.

INSTRUCTIONS	INSTRUCTIONS
<p>Maximum allowable side force on platform: 150 lbs/ 667 N.</p> <p>Maximum allowable wind speed: 28 mph/ 12.5 m/sec.</p>	 <p>Maximum load: 500 lbs / 227 kg. Maximum occupants: 2. Indoor Occupants and equipment must not exceed 500 lbs / 227 kg.</p>

IMPORTANT SAFETY RULES TO FOLLOW

1. Do not raise or extend the boom unless the machine is on a firm level surface.
2. This machine is **not** electrically insulated & **will not** provide protection from contact with electrical lines **Maintain a safe distance from any power lines!**
3. Do not use the machine as a ground for welding.
4. Do not raise the boom in strong or gusty winds.
5. Do not drive the machine on or near uneven terrain, unstable surfaces or other hazardous conditions with the boom raised or extended.
6. Do not push off or pull toward any object outside the platform.
7. Do not place or attach overhanging loads to any part of this machine.
8. Do not place ladders or scaffolds in platform or against any part of this machine.
9. Never sit, stand, or climb on the guardrails. **Both feet must always be on the platform!**
10. Do not use machine on a moving or mobile surface or trailer or vehicle.
11. Batteries contain acid. Always wear protective clothing and eyewear when working with batteries.
12. Batteries Need To Be Charged Daily. Check Battery Water Before Charging


Warning metal conducts electricity. Do Not use this Lift where it may come into contact with power lines or other electric circuits. Failure to comply to this warning will result in serious personal injury or death. For appropriate distances from High Voltage lines see chart below.

Maintain safe distances away from electrical power lines and apparatus in accordance with applicable governmental regulations and the following chart

Voltage	Minimum Safe Approachable Distance
Phase to Phase	Feet
0 to 300V	Avoid Contact
300V to 50KV	10
50KV to 200KV	15
200KV to 350KV	20
350KV to 500KV	25
500KV to 750KV	35
750KV to 1000KV	45

Allow for mast movement and electrical line sway or sag and be aware of strong or gusty winds. Do not use the machine as a ground for welding.

 **WARNING:** This product can expose you to sulfuric acid from batteries which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov

 **WARNING:** Batteries, battery posts, terminals and related accessories contain lead and lead compounds, and other chemicals known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov

If the person receiving this handout will not be the user of the equipment, forward these instructions to the operator. If there is any doubt as to the operation or safety of the equipment, **DO NOT USE!!! CALL A TOOL SHED IMMEDIATELY!!! FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN INJURY OR DEATH!**

To be filled out by the Delivery Driver delivering the lift. Upon completion attach to the original contract. Check mark the boxes after inspections are satisfactory completed.

Machine # _____ DATE _____ CONTRACT# _____

Pre-operation Inspection

- Be sure that the operator's, safety and responsibilities manuals are complete, legible and in the storage container located in the platform.
- Be sure that all decals are legible and in place. See Decals section.
- Check for hydraulic oil leaks and proper oil level. Add oil if needed. See Maintenance section.
- Check for battery fluid leaks and proper fluid level. Add distilled water if needed. See Maintenance section.

Check the following components or areas for damage, improperly installed or missing parts and unauthorized modifications:

- Electrical components, wiring and electrical cables
- Hydraulic tank, hoses, fittings, cylinders, and manifolds
- Drive and turntable motors and drive hubs
- Boom wear pads
- Tires and wheels
- Limit switches and horn
- Alarms and beacons (if equipped)
- Nuts, bolts and other fasteners
- Platform entry mid-rail or gate

Check entire machine for:

- Cracks in welds or structural components
- Dents or damage to machine
- Be sure that all structural and other critical components are present and all associated fasteners and pins are in place and properly tightened.
- After you complete your inspection, be sure that all compartment covers are in place and latched.

Function Tests At the Ground

- The ground controls function properly**
- Test Emergency Stop**
- Test the Machine Functions**
- Test the Tilt Sensor**

Function Tests At the Platform Controls

- Test Emergency Stop**
- Test the Horn**
- Test Machine Functions**
- Test the Steering**
- Test Drive and Braking**
- Test the Drive Enable System**
- Test Limited Drive Speed**

INSPECTED BY (signature) _____

PRINT NAME: _____

If any of the above items does not pass inspection, do not rent this unit.

To be filled out by the Yard Person doing the customer hook up or Delivery Driver delivering the lift. Upon completion attach it to the original contract.

CONTRACT # _____ **EMPLOYEE NAME:** _____

QUALIFIED OPERATOR ACKNOWLEDGMENT

1. Operator was shown the Operator and ANSI Manuals.

OPERATORS INITIALS _____

2. Operator understands that a “Pre-Operation Inspection and Function Test” must be performed before each shift. These procedures are detailed in the Operator’s Manual. If any problems or malfunctions are found **Do Not Operate This Lift!** Immediately call A Tool Shed so we can repair or replace the lift.

OPERATORS INITIALS _____

3. Before using this lift the Operator will inspect the jobsite for hazards, including but not limited to: operation surface irregularities, drop offs, holes, debris, obstructions (floor or overhead), high voltage conductors, wind, or adverse weather.

OPERATORS INITIALS _____

4. Operator Acknowledges that they are Qualified to operate this lift.

OPERATORS INITIALS _____

5. Only Qualified persons shall operate the equipment, and shall do so in accordance with the full provisions outlined in the operator’s manual provided. Only lessee’s trained operators are authorized to operate the equipment. Do not lend, or sub-lease this equipment.

OPERATORS INITIALS _____

Customer Acknowledges the Paint on this Lift is:

EXCELLENT _____ **GOOD** _____ **FAIR** _____

COMMENTS _____

OPERATORS SIGNATURE: _____

DATE: _____

PRINTED NAME: _____