






Start Up

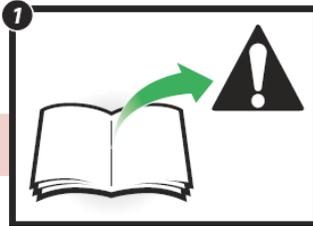


Read all warnings in pump manual or find the electronic manual (www.titantool.com)

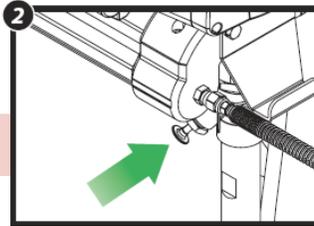


Press pusher stem.

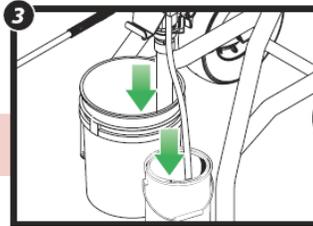


Unclip siphon / return tubes. Place siphon tube into material container. Place return tube into waste container.

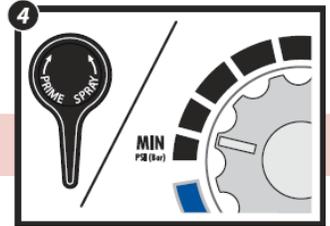


Plug in power cord. Turn PRIME/SPRAY knob to PRIME position. Set pressure to minimum.

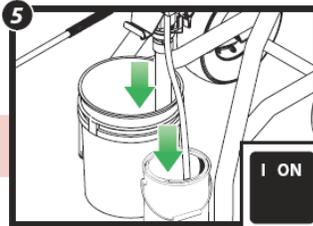


Turn power ON. Steady flow through the return tube for 5 seconds

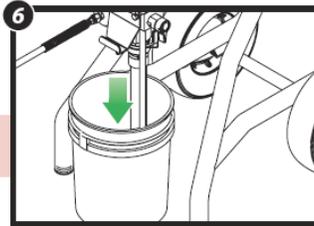

Turn power OFF. Move return tube into material container. Clip siphon tube and return tube together.

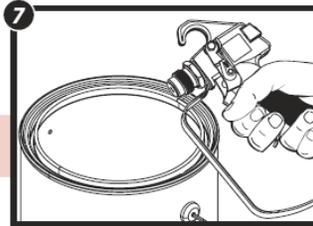


Point spray gun at separate waste container. Squeeze and hold trigger for steps 7-8. Turn power ON

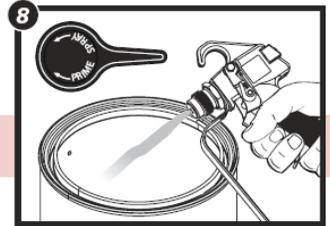


Turn PRIME/SPRAY knob to SPRAY. Continue to squeeze trigger until material is flowing freely through spray gun.




Turn the power OFF. Release trigger and lock spray gun. Turn PRIME/SPRAY knob to PRIME.

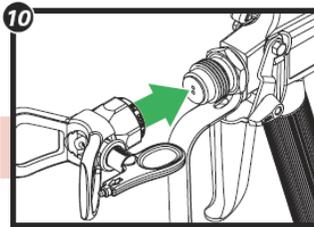

Thread the spray tip guard assembly onto the gun. Tighten by hand.

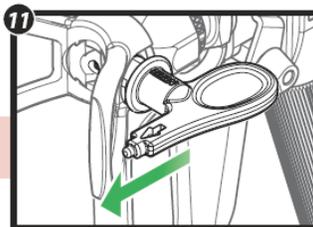


Make sure spray tip is rotated forward in SPRAY position.

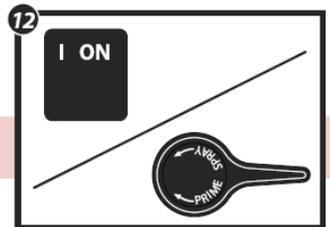


Turn power ON. Turn PRIME/SPRAY knob to SPRAY. Adjust to desired pressure.


Clean Up

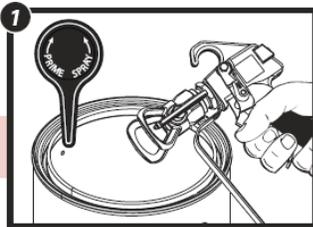


Release pressure.

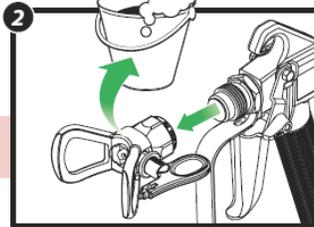


Lock spray gun. Remove spray tip and clean with soft bristled brush.

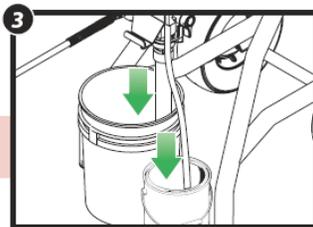


Unclip siphon / return tubes. Place siphon tube into appropriate cleaning solution. Place return tube into waste container.

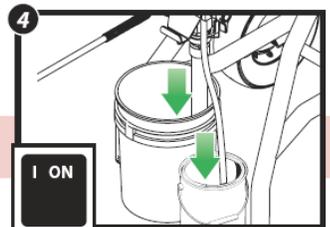


Turn power ON. Allow a minimum of one (1) gallon of the appropriate cleaning solution to flow through the return tube.

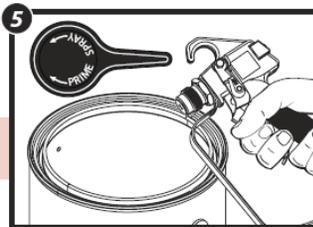


Point the spray gun to the side of a waste container, squeeze the trigger and turn the PRIME/SPRAY knob to SPRAY.

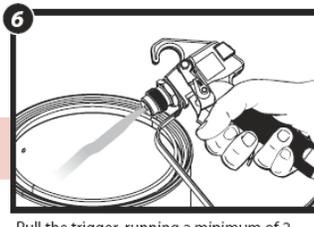


Pull the trigger, running a minimum of 2 gallons through the gun. Then add one 4-oz. bottle of LS-10 to 1 gallon of water and run the mixture through the pump, hose and gun.

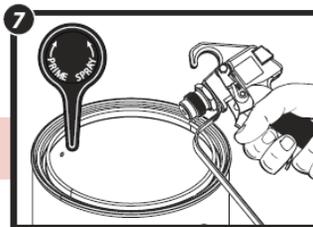


Turn power OFF and release pressure.

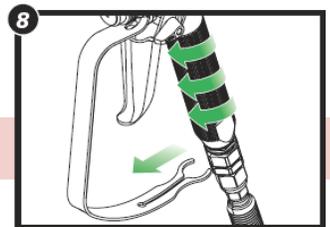


Pull trigger guard and unscrew filter housing.

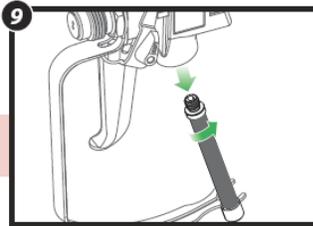


Remove filter by turning counter-clockwise. Clean filter with soft bristled brush.

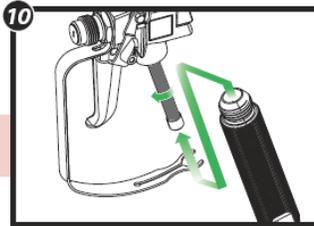

Reassemble the filter and gun assembly.

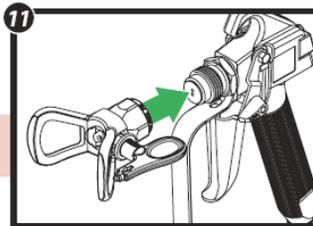

Install spray tip and guard assembly.

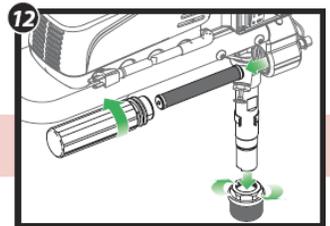

Remove and clean the manifold filter and inlet screen. Replace and hand-tighten.