

WARNING HOT WATER PRESSURE WASHER

Any piece of equipment can be dangerous if not operated properly. **YOU** are responsible for the safe operation of this equipment. The operator must carefully read and follow any warnings, safety signs and instructions provided with or located on the equipment. Do not remove, defeat, deface or render inoperable any of the safety devices or warnings on this equipment. If any safety devices or warnings have been removed, defeated, defaced, or rendered inoperable, **DO NOT USE THIS EQUIPMENT!!!**

BURNER REQUIRES DIESEL FUEL ONLY!

 **WARNING:** Operating, servicing, and maintaining this equipment can expose you to chemicals including engine exhaust, carbon monoxide and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize your exposure, avoid breathing exhaust, do not idle the engine except as necessary, operate and service your equipment in a well-ventilated area and wear gloves or wash your hands frequently when servicing your equipment. For more information go to www.P65warnings.ca.gov

<<< **DANGER** >>> <<< **DANGER** >>> <<< **DANGER** >>>

- **HIGH PRESSURE SPRAY CAN CAUSE EXTREMELY SERIOUS INJURY. THE PRESSURE STREAM CAN PIERCE SKIN, DAMAGE EYES, BURST EAR DRUMS. USE EXTREME CAUTION**
- **NEVER TOUCH A LEAKING HOSE, IT CAN PIERCE SKIN. SHUT THE UNIT DOWN BEFORE HANDLING IT.**
- Use extreme caution whenever operating, moving, loading, or unloading this equipment. During & after operation the Muffler, Burner, Hose, Gun, & other components are Extremely Hot & will cause Serious Burns.
- Provide adequate ventilation when operating this equipment. Internal combustion engines and the burner consume oxygen and give off deadly carbon monoxide gas.
- Use extreme care when placing this unit; keep it a safe distance from combustibles, like tall grasses and over hanging structures. Always keep a garden hose, or proper fire extinguisher nearby.

PRE-OPERATION CHECK: Before starting your pressure washer:

1. Check pump oil level. Dip stick for pump is located on the top of the pump.
2. 5/8" Cold water supply with a minimum of 3 GPM (Gallons Per Minute), 20 PSI (Pounds per Square Inch).
3. Hose, wand and nozzle are securely attached.
4. Open spray gun to relieve pressure before starting.
5. Check engine oil (SAE 10W-40).

OPERATION PROCEDURES: How to safely operate your pressure washer:

1. Attach a 5/8" garden hose to inlet connector. Minimum flow of water to the pressure washer should be 3 GPM.
2. Turn on water at faucet and squeeze spray gun trigger, allowing water to flow until a steady stream comes out the wand.
3. Turn engine fuel lever and switch to the "on" position. Then choke engine and pull rope to start. After engine is started, turn off choke.

CAUTION: Small engines may kick back. Do not hold pull rope tightly in hand.

4. With spray nozzle pointed away from you and anybody else, press trigger on spray gun to obtain pressurized spray.

IGNITING THE BURNER: After the pressure washer is running and you want to use hot water:

1. Make sure to keep clear of the top of the burner.
2. Turn the burner switch to "on". The water temperature will slowly rise.
3. Warning the water, hose, gun, and burner are extremely hot and will cause serious burns.

SHUTDOWN PROCEDURES: How to safely shut down your pressure washer:

1. If the burner was used turn the switch to "off" then let unit run until the water leaving the tip is cold. Do Not use hand or other body parts to test temperature.
2. Turn off engine.
3. Squeeze gun trigger to relieve any pressure.
4. Disconnect water supply hose from washer.

CAUTION: Do not allow pump to run without water. Disconnect all hoses to allow water to drain.

5. Protect the unit from freezing.

WASHING TECHNIQUES: Tips on how to power wash more effectively:

1. Test pressure & spray pattern on a hard surface (i.e., cement) to gauge distance & impact of water spray.
2. Hold spray nozzle about one foot from the surface being cleaned. For the best surface cleaning action, spray at a slight angle.
3. To change spray nozzle, turn off motor and squeeze gun trigger to release hose pressure. Pull back on the quick connect at the end of the wand, and exchange nozzle. Make sure nozzle is seated securely. Restart engine.
4. Use the chemical injector to apply detergent (see "Chemical Injector Use" list below). Wash from the bottom and work up. Allow the chemical to set 5-10 minutes on the surface. Then rinse from the top down.


NOTE: If the pressure washer is running and not being used for more than 5 minutes, turn off engine.

SAFETY CHECKLIST: Tips for pressure washer operation safety:

1. Always read the warning labels on the equipment, and operating instructions.
2. Eye safety devices and foot protection should be worn when using this equipment. High pressures from these units can cause bodily harm.
3. Allow the engine to cool for at least two minutes before refueling. If any fuel is spilled, make sure the area is dry before testing the spark plug or starting the engine.
4. Always turn off the unit when making adjustments, such as changing the nozzle or adding accessories.
5. Inspect the condition of the high-pressure hose, spray gun, and wand before using.
6. Do not operate a pressure washer near or above power lines or fatal electrical shock may result.
7. Pressure washers have a number of inherent warnings, including: · Operate non-electrical pressure washers outdoors. Flammable liquids can create fumes, which can ignite or hinder breathing. · High pressure spray can cause paint chips or other particles to fly at high speeds. · Keep water spray away from electric wiring or fatal electric shock may result.
8. Exercise care when using this equipment.
9. Never point the gun at anyone else or any part of your body.
10. Do not put hands or fingers in front of gun.
11. Never allow children or unauthorized personnel to handle washer.
12. Wear proper attire: waterproof coveralls, heavy rubber shoes, safety glasses and insulated gloves.
13. Be sure gun is held securely by operator. Hot water produced by this washer can cause severe burns. If skin is hit by sprayed liquid, seek medical attention immediately.
14. Do not alter steam cleaner in any manner. If repairs are necessary, contact A Tool Shed immediately.
15. Do not leave washer under pressure unattended at any time.
16. **PACEMAKER NOTICE:** Since oil and gas fired ignition involves high voltage spark equipment, personnel using pacemaker or heart activating equipment should not work in the proximity of this steam cleaner or perform any repairs, as they may be adversely affected by high voltage, particularly in direct contact with high voltage.

Quick disconnect pressure washer nozzles

This coupler contains an O-ring to facilitate a tight seal. All quick disconnect female couplers in a pressure washing system contain these O-rings. It is important that pressure washer nozzles snap tightly into the female coupler. An improperly seated nozzle can become a projectile causing damage or injury, at the very least it can result in a lost nozzle.

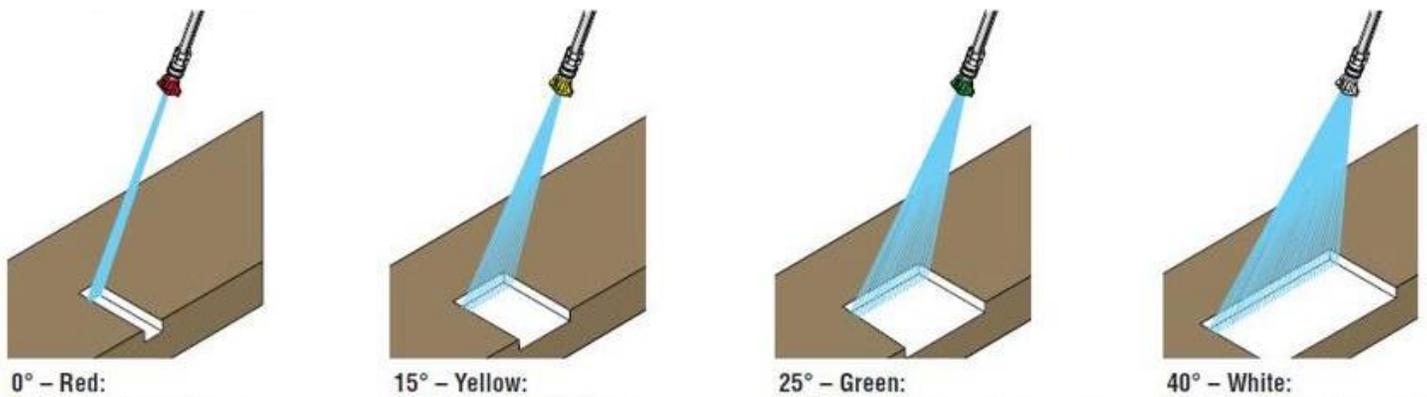

The red tip is the zero-degree nozzle - these pressure washer nozzles produce a pencil point pattern, there is no fan created so this is not the tip to use when cleaning coverage is desired. The red tip does deliver the highest impact as it concentrates the pressure into the smallest area. Avoid damaging wood or other fragile surfaces. This is an ideal tool for cleaning under the deck of a lawnmower, removing caked on mud from equipment, cleaning stains from concrete, masonry, steel & aluminum even removing the grass from cracks in the sidewalk.

The yellow tip creates a 15-degree fan pattern. These pressure washer nozzles are referred to as chiseling tips. Held at a 45-degree angle you can use it like a scraper to remove peeling paint or mildew. It is also used for other tasks where breaking the bond is harder than average. Of your different pressure washer nozzles, you will find yourself using this one the most often when the task is tough. This is the only situation I know where you will find that when the going gets tough the tough gets yellow.

The green tip produces a 25-degree fan pattern. This is a wash tip. These pressure washer nozzles are the ones to use when breaking the bond between the grime & substrate is reasonably easy. These can also be used for sweeping leaves or debris from flat surfaces or curbing. These pressure washer nozzles have the widest variety of applications as the fan degree allows for good impact pressure & cleaning coverage.

The white tip is the 40-degree fan tip. The wider dispersion of the impact pressure limits these pressure washer nozzles to rinsing & delicate washing. These are the tips to use for washing/rinsing glass or washing vehicles. These are great tips for wooden decks & all delicate substrates.

CHEMICAL INJECTOR USE: NOTE: This feature is designed for use with mild detergents only. Since the cleaning solution travels through the heat exchanger coil, DO NOT use corrosives as they will cause extensive damage as well as pose a considerable safety hazard. 1. Refer to "Risk of Bodily Injury/Detergents". Be certain to wear protective safety attire as stated on pg. 2. Prepare detergent solution according to label directions. (Never pump acids, alkaline, abrasive fluids, or solvents through the unit. Due to the unknown & often corrosives characteristics of many detergents commonly used in the pressure washer cleaning industry, it is recommended to use only Mi-T-M detergents with this unit.) 3. Fully immerse the strainer end of the clear vinyl detergent hose into the detergent solution. 4. Adjust the amount of detergent desired by locating the adjustment knob at the end of the clear vinyl hose. Turn the knob completely counterclockwise to set at maximum siphon rate. Be certain the adjustable grip on the dual lance is turned completely clockwise for low pressure detergent operation. NOTE: This injection system is designed to apply detergents under low pressure only. It will not allow detergent solutions to be introduced into the system unless the dual lance is set in the low-pressure mode. 5. To apply solution; unlock the trigger gun & squeeze the trigger. In a few moments, a detergent/water mixture will exit the nozzle. Start spraying the lower portion of the surface being cleaned & move up, using long overlapping strokes. Applying from the bottom up helps avoid streaking. Allow to soak briefly. Avoid working on hot surfaces or in direct sunlight to minimize the chances of the detergent drying, which may result in damaging surfaces. Be certain to clean a small section at a time. 6. To rinse; lock the trigger gun in the "OFF" position, rotate the adjustable grip on the dual lance counterclockwise for high pressure. Unlock the trigger gun & spray. It will take about 30 seconds to purge all detergent from the line. For best rinsing results, start at the top & work down. 7. Siphon a gallon of water through the low-pressure detergent injection system after each use. This prevents the possibility of corrosion & detergent residue causing mechanical problems in the next use.

If the person receiving this handout will not be the user of the equipment, forward these instructions to the operator. **IF** there is any doubt as to the operation or safety of the equipment,

DO NOT USE!! CALL A TOOL SHED IMMEDIATELY!!!

FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN INJURY OR DEATH